



INSTRUCTION MANUAL

LONG RAM JACK / HYDRAULIC CYLINDER 5t, 620-1100mm



CAPACITY MAX.: 5 000 kg
MIN. LENGTH: 620 mm
STRETCH: 500 mm



WORK WITH HYDRAULIC CYLINDER

- Expansion: Turn the drain valve to the closed position by turning it clockwise. Pump actuator rod for extension to the desired length.
- Download Piston: Very slowly turn the drain valve counterclockwise. For slow and safe withdrawal of the piston, turn the valve only partially. If the drain valve to release the most part, load will run very fast.

!!! CAUTION !!!

For your safety and protection from possible injury.

- Do not abuse the hydraulic cylinder over its rated capacity. Overloading can damage or completely destroy the equipment.
- This device is only used for expansion in the vertical position. After expansion, subject to the required distances shall be the subject immediately ensure adequate preparations for its weight.
- Strong blow could damage the hydraulic cylinder.
- Before the filling completely run the piston. Place the cylinder in a vertical position, add oil to the bottom of the fill hole. Use only oil designed for hydraulic jacks. Wrong choice of oil can damage the equipment.
- All fasteners must be securely tightened before use. Do not confuse the accessories are included.
- It is the responsibility of the owner and / or operator to keep this user manual and all information and warning labels to keep reading.
- Carefully read and follow the instructions.
- Failure to follow the instructions and improper use of the device may cause damage and / or personal injury.
- It is forbidden any movement of people between the outstretched items.

ONCE IT REACHES THE MAXIMUM LENGTH, STOP PUMPING. MAXIMUM HAUL IS MARKED RINGS ON THE PISTON. CROSSING THE BORDER MAY SUBSEQUENTLY RESULT IN INCORRECT OPERATION OF THE EQUIPMENT.

GUARANTEE TERMS AND CONDITIONS

Dear customers,

Thank you for buying our product now. The importer of the product Levior s.r.o., Troubky 900, 751 02 Troubky provides for its products guarantee of 24 months from the date of purchase. The warranty covers defects and malfunctions that during the 24 month warranty period resulting from manufacturing errors or material used. These defects will be pared free of charge up to 31 days from the date of receipt of the product from the store.

Permission for a free repair warranty is void in the following cases:

- The product has been installed and / or operated contrary to operating instructions
- It was damaged serial number or warranty seal device
- The fault is intolerable interference in the product (unauthorized service)
- The product has been mechanically damaged (during transport or falling)
- If it is a product regular maintenance / lubrication, cleaning machines, etc.)

The product has a warranty repair takes only in original packaging. The right to exchange the product arises if, in the written statement of the importer (servicing) it is unrecoverable failure. If it turns out that the complaint was unjustified, the importer will charge the customer shipping costs and working time, so ask customers to possible faults before returning to consult with an expert.